




USER MANUAL – EN

IN 26629 Indoor Bike inSPORTline inCondi S120i

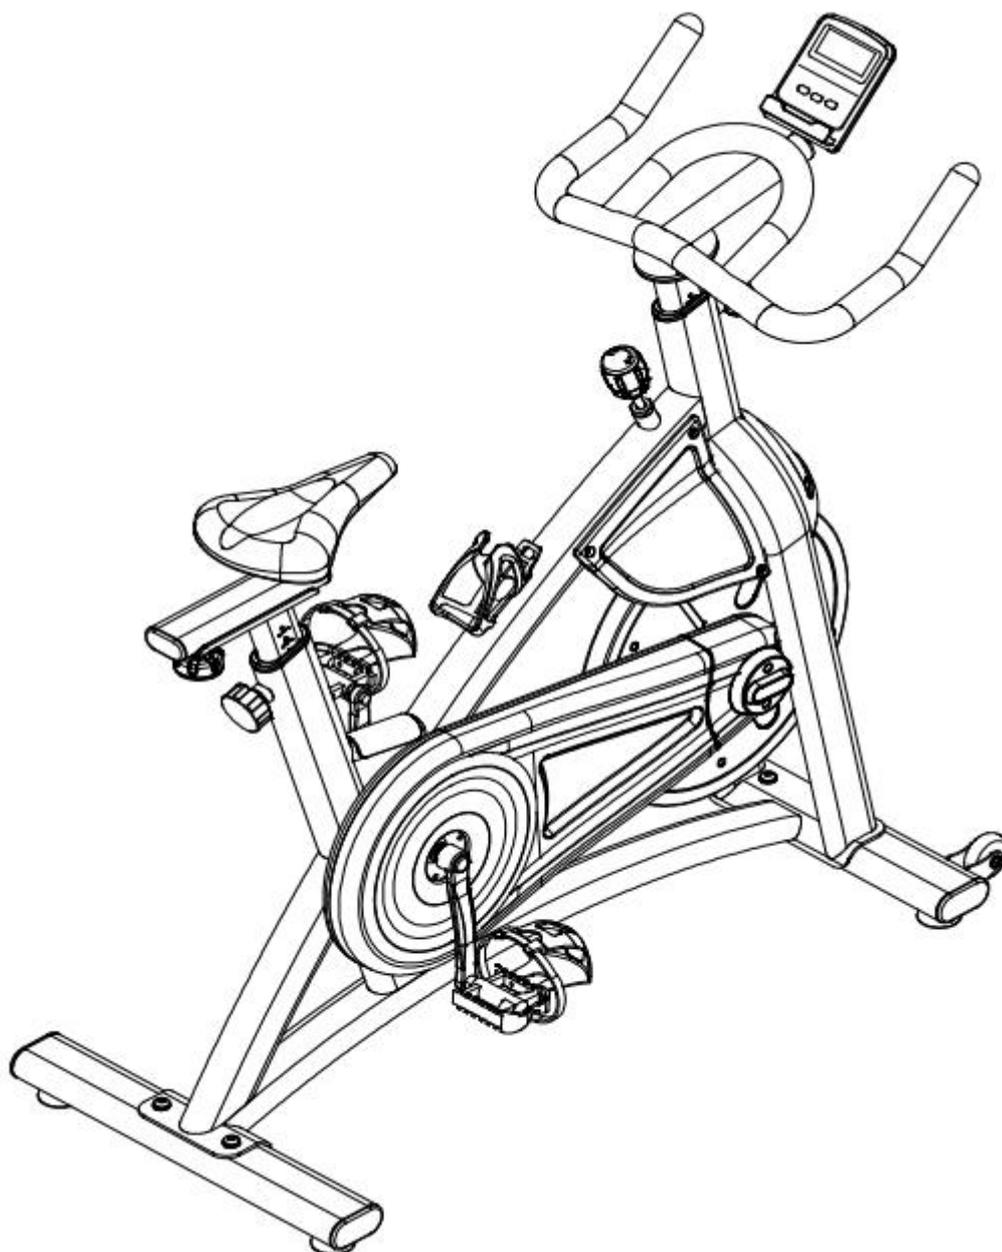

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

CONTENTS

- SAFETY INSTRUCTIONS..... 3
- ASSEMBLY 4
- CONSOLE 10
- USE 11
- CORRECT BODY POSTURE 12
- EXERCISE INSTRUCTIONS 12
- MAINTENANCE 13
- STORAGE 13
- IMPORTANT NOTICE 13
- PARTS LIST 14
- DIAGRAM 16
- ENVIRONMENT PROTECTION 16
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 17

SAFETY INSTRUCTIONS


- To ensure the best safety of the exerciser, regularly check it on damages and worn parts.
- If you pass on this exerciser to another person or if you allow another person to use it, make sure that that person is familiar with the content and instructions in these instructions.
- Only one person should use the exerciser at a time.
- Before the first use and regularly make sure that all screws, bolts and other joints are properly tightened and firmly seated.
- Before you start your work-out, remove all sharp-edged objects around the exerciser.
- Only use the exercise for your work-out if it works flawlessly.
- Any broken, worn or defective part must immediately be replaced and/or the exerciser must no longer be used until it has been properly maintained and repaired.
- Parents and other supervisory persons should be aware of their responsibility, due to situations which may arise for which the exerciser has not been designed and which may occur due to children's natural play instinct and interest in experimenting.
- If you do allow children to use this exerciser, be sure to take into consideration and assess their mental and physical condition and development, and above all their temperament. Children should use the exerciser only under adult supervision and be instructed on the correct and proper use of the exerciser. The exerciser is not a toy.
- Make sure there is sufficient free space around the exerciser when you set it up at least 0.6 m.
- To avoid possible accidents, do not allow children to approach the exerciser without supervision, since they may use it in a way for which it is not intended due to their natural play instinct and interest in experimenting.
- Please note that an improper and excessive work-out may be harmful to your health.
- Please note that levers and other adjustment mechanisms are not projecting into the area of movement during the work-out.
- When setting up the exerciser, please make sure that the exerciser is standing in a stable way and that any possible unevenness of the floor is evened out.
- Always wear appropriate clothing and shoes which are suitable for your work-out on the exerciser. The clothes must be designed in a way so that they will not get caught in any part of the exerciser during the work-out due to their form (for example, length). Be sure to wear appropriate shoes which are suitable for the work-out, firmly support the feet and which are provided with a non-slip sole.
- Be sure to consult a physician before you start any exercise program. He may give you proper hints and advice with respect to the individual intensity of stress for you as well as to your work-out and sensible eating habits.
- The indoor bike has no freewheel. The pedals will move if the flywheel is spinning.
- If you do not use the indoor bike, increase the resistance to the maximum to prevent the flywheel from moving.
- **Maximal weight limit:** 110 kg
- **Category:** HC kg

IMPORTANT NOTES



- Assemble the exerciser as per assembly instructions and be sure to only use the structural parts provided with the exerciser and designed for it. Prior to the assembly, make sure the contents of the delivery are complete by referring to the parts list of the assembly and operating instructions.

- Be sure to set up the exerciser in a dry and even place and always protect it from humidity. If you wish to protect the place particularly against pressure points, contamination, etc., it is recommended to put a suitable, non-slip mat under the exerciser.
- The general rule is that exercisers and training devices are no toys. Therefore, they must only be used by properly informed or instructed persons.
- Stop your work-out immediately in case of dizziness, nausea, chest pain or any other physical symptoms. In case of doubt, consult your physician immediately.
- Children, disabled and handicapped persons should use the exercise only under supervision and in presence of another person who may give support and useful instructions.
- Be sure that your body parts and those of other persons are never close to any moving parts of the exerciser during its use.
- When adjusting the adjustable parts, make sure they are adjusted properly and note the marked, maximum adjusting position, for example of the saddle support, respectively.
- Do not work out immediately after meals!




ASSEMBLY

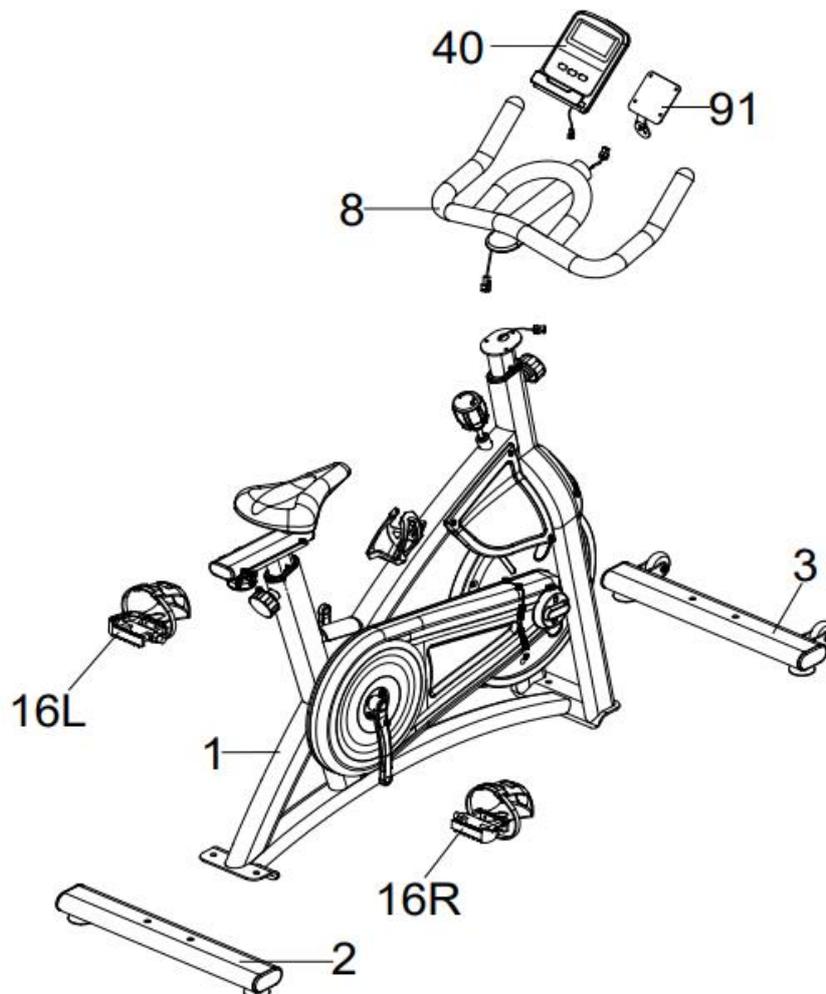

1.	Main frame	1x	16. L/R	Pedals (left/right)	2x
2.	Rear stabilizer	1x	40.	Console	1x
3.	Front stabilizer	1x	91.	Console holder	1x
8.	Handles	1x			

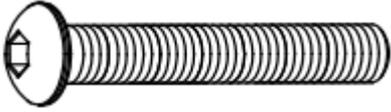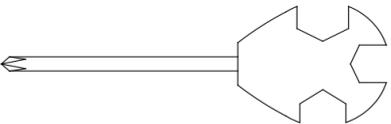	66#	M10*60	4x
	71#	M8*15	3x
	41#	M5*25	2x
	85#	$\phi 20 * \phi 10.5 * 2.0$	8x
	88#	$\phi 8.4 * \phi 13 * 2.5$	3x
	86#	$\phi 8.5 * \phi 16 * 1.5$	3x
	90#	$\phi 5.4 * \phi 12 * 1.0$	2x
	92#	M10	4x
	101#	S3	1x
	97#	S5	1x
	98#	S6	1x
	96#	S13-15-17	1x





Step 1

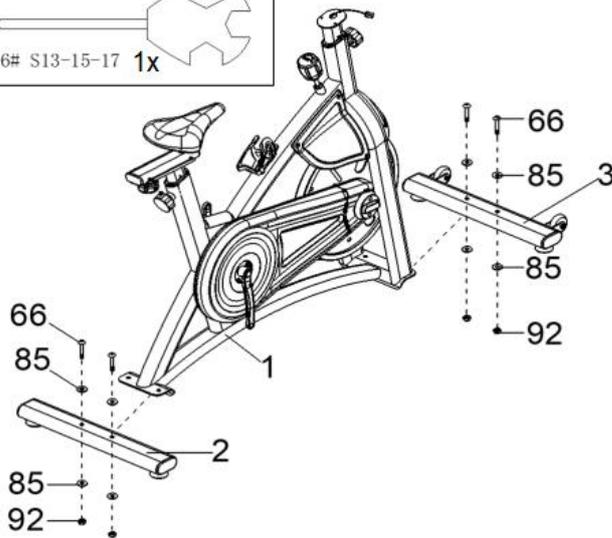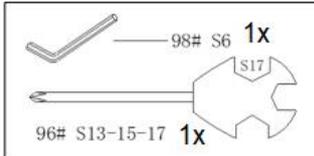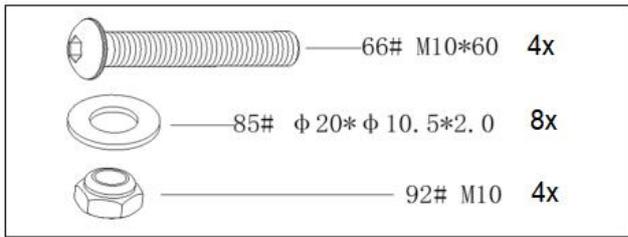

Attach the front stabilizer (3) and rear stabilizer (2) to the main frame (1) with 4x M10*60 screws (66), 8x φ10.5*20*2.0 flat washers (85), and 4x M10 nuts (92).

Note: Tighten the screws




Step 2

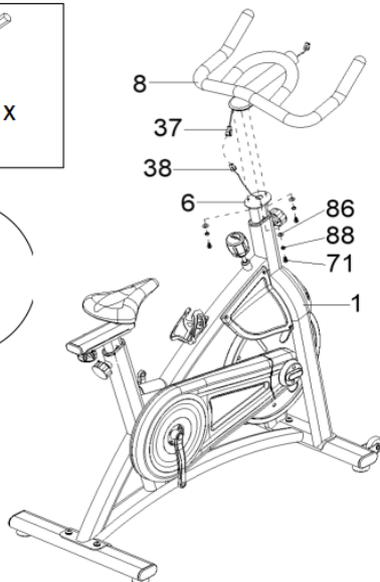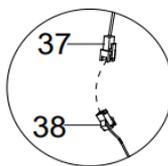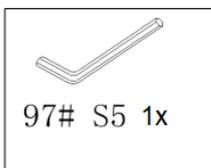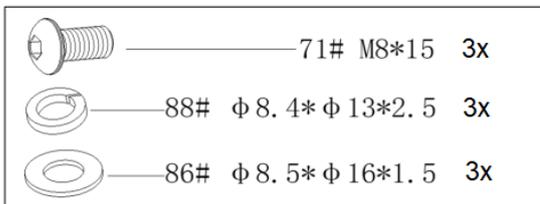

Connect the sensor cable from the handles (37) to the cable leading from the main frame (38). and then fix with 3x M8*15 screws, 3x φ8.5*13*2.5 spring washers (88) and 3x φ8.5*16*1.5 flat washers (86).




Note: Tighten the screws.

Step 3

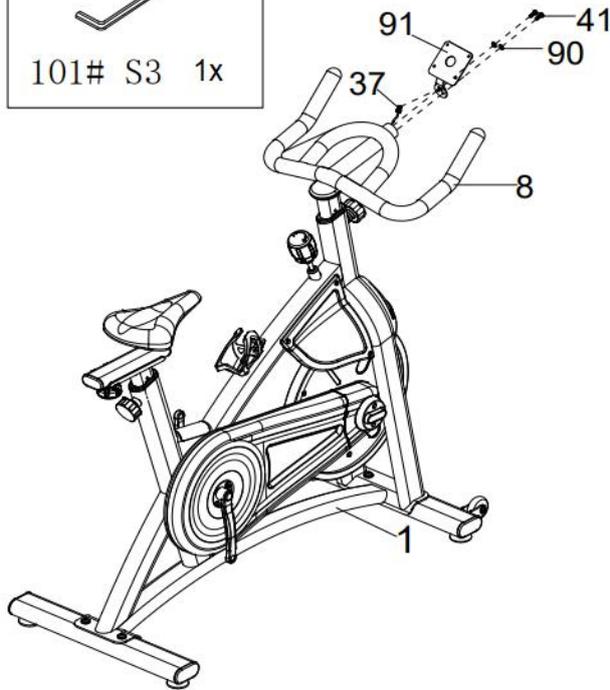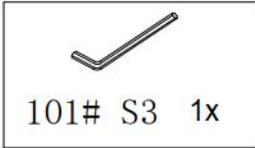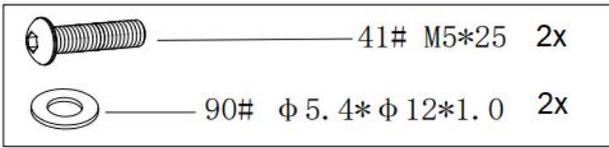

Pass the sensor cable (37) through the console holder (91), then attach the console holder (91) to the handles (8) with 2x M5*25 screws (41) and 2x φ5.2*12*1.0 washers (90)



Step 4

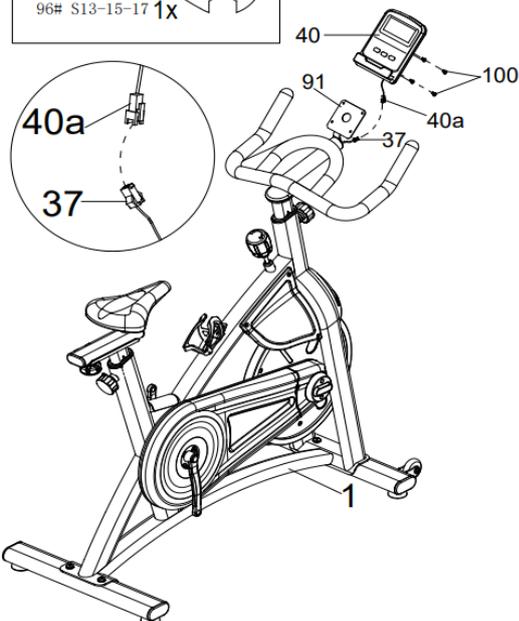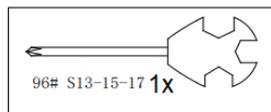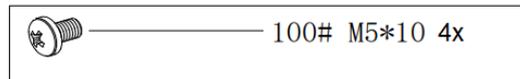

Attach the console (40) to the console holder (91) with 2x M5*10 screws (100)


Connect the sensor cable (37) to the cable leading from the console (40a).

Step 5

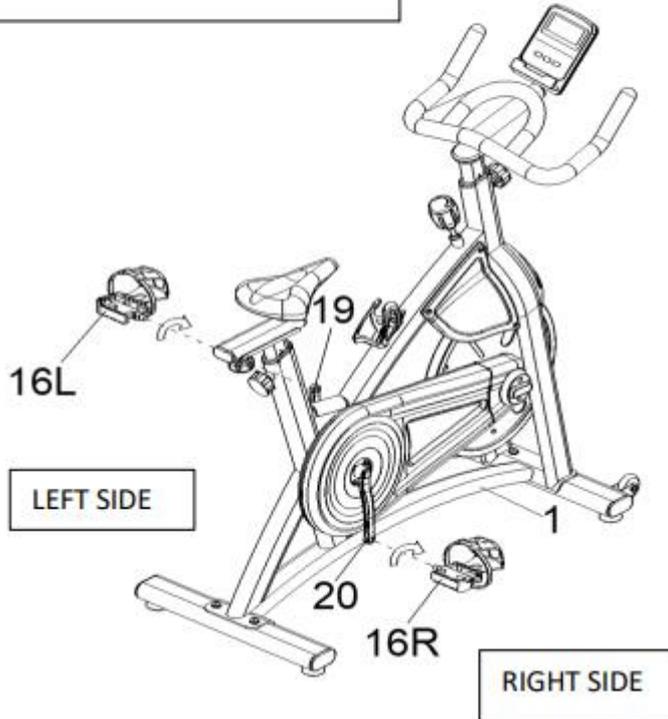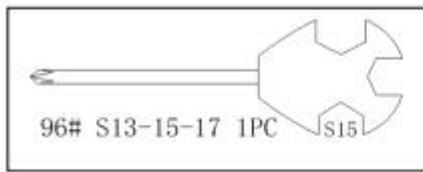

Attach the right (16R) and left (16L) pedals to the right (20) and left (19) cranks. Tighten with wrench (96)

Step 6

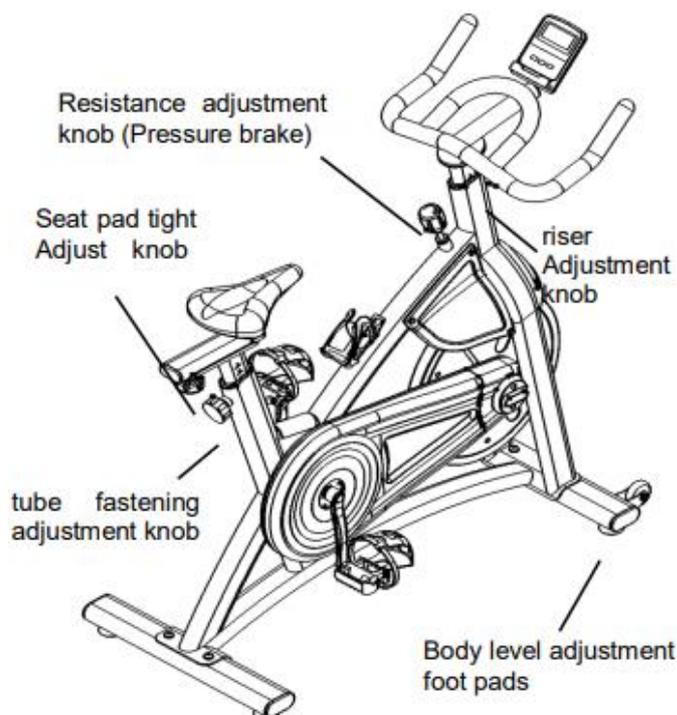

Check the fastening of all parts and adjust the desired height and position of the seat.

Adjust the height of the handrails

Adjusting the height and position of the seat

To adjust the seat height, loosen the seat post hand knob (18) and move the seat post to the desired position, then tighten the hand knob again. Do not exceed the mark.

To adjust the seat position, loosen the hand knob under the seat (21) and move the seat to the desired position. Then tighten the hand knob again. Do not exceed the mark.

Adjusting the height of the handrails


Adjust the height of the handrails by loosening the knob on the handrail frame (18), after adjusting the height, tighten the knob again. Do not exceed the maximum adjustment mark.

Levelling

Use the feet (15) for trainer levelling.


Resistance setting

You adjust the resistance using the knob (22) on the main frame.

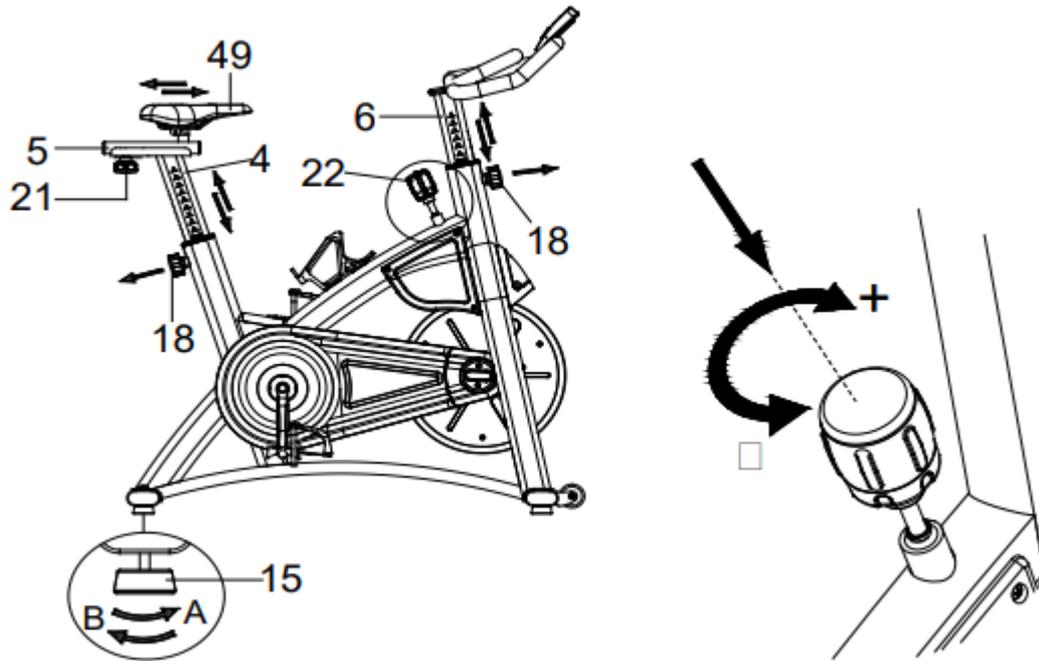


Moving

To move, grab the handles (8) and pull the trainer onto the transport wheels (3).

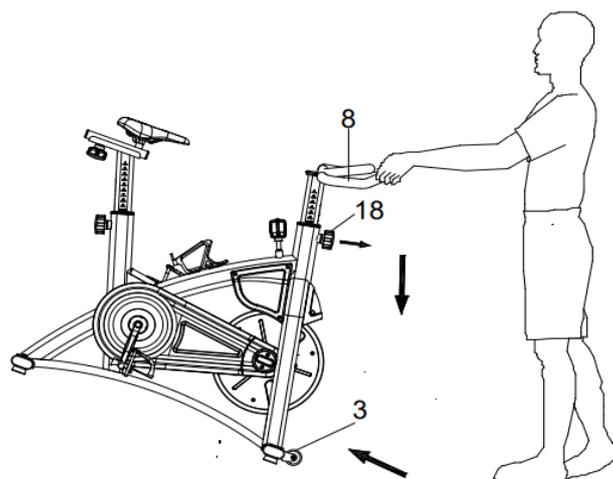

CONSOLE

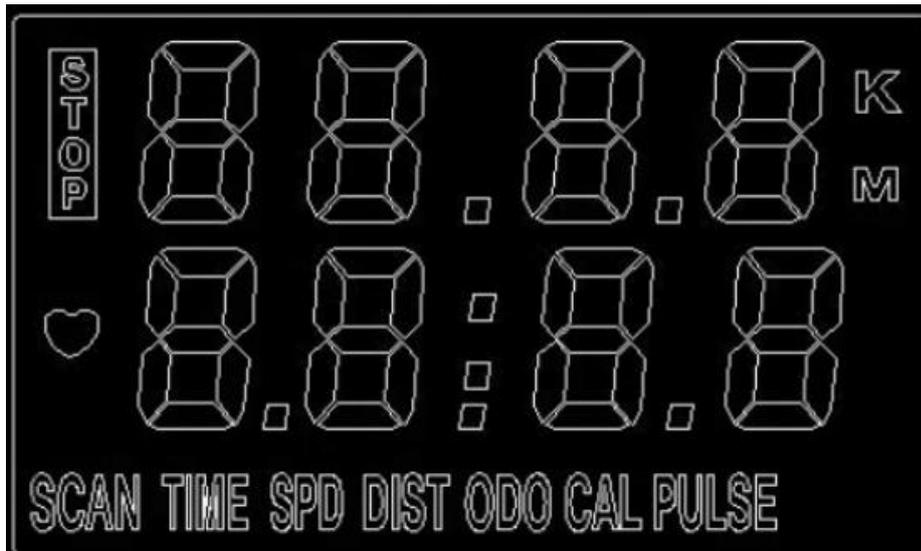

Startup

By moving the pedals or pressing any button, the trainer starts.

Shutdown

After 4 minutes of inactivity, the console automatically switches to sleep mode. You can wake up the console by pressing any button or moving the pedals.

Power supply

The console is powered by 2x AAA batteries.

BUTTONS

SET	When setting the subtraction program, press the button to adjust the value. Hold for faster setup.
MODE	Press the button to select the value shown on the display Hold for 2 seconds to reset
RESET	Hold for 2 seconds to reset

ZOBRAZENÍ

SCAN	Displays data in a cycle: TIME – SPD (speed) – DIST (distance) – ODO (odometer) – CAL (calories) – TCNT (total count)
TIME	Display training time Display range: 00:00 – 99:59 min:sec Setting range: 00:00 – 99:00 min:sec
SPEED	Displays speed Units: km/min, miles/min
DISTANCE	Displays distance Units: kilometres, miles Setting range: 0 - 999
ODO	Displays the total distance traveled
CALORIES	Displays the number of calories burned

COUNTDOWN PROGRAMS

The console contains 3 countdown programs: time, distance, calories.

Time countdown

Press the MODE button to select TIME. Then press the SET button to adjust the value. Confirm the value by pressing MODE.

Setting range: 00:00 – 99:00 min:seconds.

Distance countdown

Press the MODE button to select DISTANCE. Then press the SET button to adjust the value. Confirm the value by pressing MODE.

Setting range: 0 – 99.50 km or miles

Calories countdown

Press the MODE button to select DISTANCE. Then press the SET button to adjust the value. Confirm the value by pressing MODE.

Setting range: 0 – 99.50 km or miles

Bluetooth

Support basic connection to Swift and Kinomap apps.

USE

Exercise on the indoor bike is based on very simple movements, but you will surely fall in love with them. Thanks to simplicity of the exercise on the indoor bike in can be done by elderly people. Prior to exercise, it is necessary to adjust the height of the saddle. It is important that you sit comfortably. The bicycle saddle must be set so that you can hold the ergonomically shaped handles when sitting. You should not have fully extended hands. You can damage your muscles.

To ensure a comfortable and comfortable exercise, put your feet on the pedal. Nowadays, all modern pedals are equipped with straps for fastening and stabilizing of the foot. It is important for your foot to be firmly and safely positioned during exercise.

The basis of exercising on a bicycle is that the legs are moving on a specific elliptical path. This movement is very similar to cycling. When doing exercise on a bicycle, you just sit on the saddle with the right height, keep your feet firmly in the pedals, hold the ergonomically shaped handles and exercise.

It is advisable at the beginning to choose a lower load. If you exercise at regular intervals on an indoor bike, you can gradually increase the load. You can increase the load gradually over a week or two weeks. Selecting a high load during the start of training can lead to rapid fatigue and muscle damage.

When exercising, it's important to choose the right load and the right tempo. Try to keep it throughout the exercise. It is not recommended to choose a high pace right from the start. Increase tempo after about a week of regular exercise. The high pace is not equal to the faster burning of calories. Correct calorie burning is reflected in an appropriate and regular exercise. At the beginning of the exercise, the number of burned calories may seem low, but regular and appropriate exercise is the key to achieving the best results.

Exercise on the indoor bike also leads to the formation of muscles. It is mainly used to strengthen the thigh and calf muscles. While exercising on a bicycle, you also move your buttocks.

If you want to exercise right, you should not forget to breathe properly. Proper and regular breathing is recommended in any exercise. It is important to keep regular deep inhales and exhales. Regular and proper breathing during exercises on the indoor bike involves intense exercise of the abdominal muscles. It is advisable to practice 30-35 after consuming food. Failure to do so may result in less calories burned, and in older age even lead to digestive problems.

For best results, you should also consider your diet. It is recommended to start a day of eating sweet food and pastries or muesli with milk. For lunch is recommended to eat a caloric richer meal. Do not forget about the soup. In the evening, light meals are recommended. If you want to improve your health, it's not just a regular exercise but a whole diet.

Bicycle exercise is an effective exercise for all busy people. Exercise on the indoor bike is effective in strengthening muscles, especially thighs, calves and buttocks. Regular exercise can lead to a slimmer figure. Exercise is recommended not only as a winter training for cyclists but also for people who want to burn excess calories. Regular breathing, regular exercise, reasonable tempo, and balanced diet can lead to your desired results.

CORRECT BODY POSTURE

When training, keep your body upright, or you can learn your hand on your forearms. During pedaling, you should not have your legs fully extended. Your knees should be slightly bent when fully pressing down the pedal. Keep your head straight with your spine to minimize the pain of the cervical muscles and upper back muscles. Always exercise fluently and rhythmically.

EXERCISE INSTRUCTIONS

A successful workout begins with warm-up exercises and ends with cool-down (relaxing) exercises. The warm-up exercises should make your body ready for the main workout. The cool-down phase should protect your muscles from injuries and cramps. Do warm-up and cool-down exercises as shown in the chart below.



Touching your toes

Slowly bend your back from hips. Keep your back and arms relaxed while stretching downwards to your toes. Do it as far as you are able and hold the position for 15 seconds. Bend your knees slightly



Upper thigh

Lean against a wall with one hand. Reach down and behind you. Lift up your right or left foot to your buttock as high as possible. Keep for 30 seconds and repeat twice for each leg.



Hamstring stretched

Sit and outstretch your right leg. Rest the sole of your left foot against the inside of your right thigh. Stretch out your right arm along your right leg as far as you can. Hold for 15 seconds and relax. Repeat all with your left leg and left arm



Inside upper thigh


Sit on the floor and place your feet together. Knees are pointed outwards. Pull your feet as close as possible to your groin. Press your knees carefully downwards. Keep this position for 30-40 seconds if possible.



Calves and Achilles tendon

Lean against a wall with your left leg in front of the right one and your arms forward. Stretch out your right leg and keep your left foot on the floor. Bend your left leg and lean forwards by moving your right hip in the direction of the wall. Hold for 15 seconds. Keep your leg stretched and repeat exercising with other leg.

Exercise Stage. Regular exercise will make your muscles stronger. Keep the pace according to the chart during the training. Training should take at least 12 minutes.

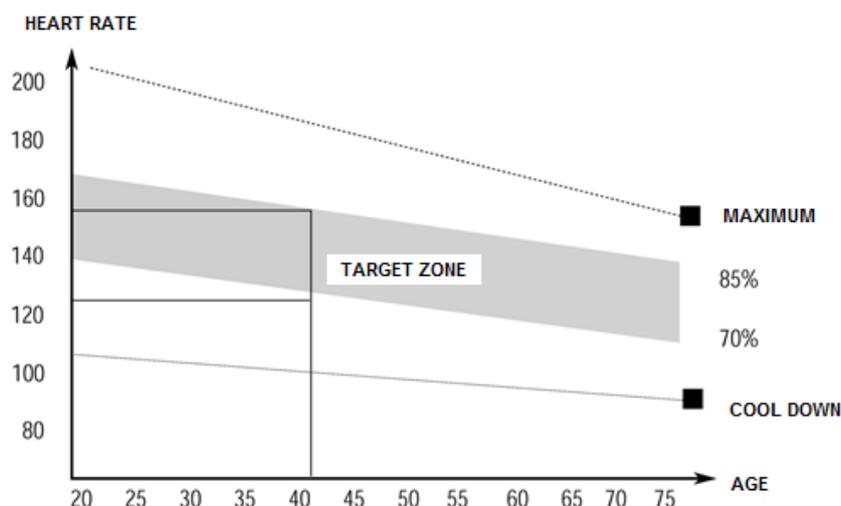

Then let the muscles calm down by reducing the pace for approx. 5 min. Then do the warm-up exercises. Train regularly at least 3 times a week.

MAINTENANCE

- When assembling, tighten all screws and adjust the bike to the horizontal position.
- Check the screws after 10 hours of use.
- Wipe the sweat after the exercise. Clean the device with a cloth and gentle cleanser. Do not use solvents or aggressive cleaners on the plastic parts.
- When noise is increased, it is necessary to check that all joints are tightened properly.
- Place the product in a clean, ventilated and dry room.
- Do not expose the device to direct sunlight.

STORAGE

Keep the indoor bike in a clean and dry environment. Make sure that the indoor bike is not plugged in to the socket.

IMPORTANT NOTICE


- This indoor bike comes with standard safety regulations. Any other use is prohibited and may be dangerous to users. We are not responsible for any injury caused by improper and forbidden use of the machine.
- Consult your doctor before starting training on the indoor bike. Your doctor should evaluate whether you are physically fit to use the machine and how much effort you are able to undergo. Incorrect exercise or switching of the body can harm your health.
- Carefully read the following tips and exercises. If you experience pain, nausea, breathing, or other health problems during exercise, immediately stop the exercise. If the pain persists, contact your doctor immediately.
- This indoor bike is not suitable for medical purpose. It can also not be used for healing purposes.
- The heart rate monitor is not a medical device. It provides only approximate information about your average heart rate, and any suggested pulse rate is not medically binding. Accumulated data may not always be accurate regarding uncontrollable human and environmental factors.

PARTS LIST

No.	Name	Qty.	No.	Name	Qty.
1	Main Frame	1	23	Flywheel Axle	1
2	Rear Stabilizer tube	1	24	Flywheel Bushing12*28*61.5	1
3	Front Stabilizer tube	1	25	Flywheel Bushing15*28*33.5	1
4	Seat Post Tube	1	26	Flywheel base	2
5	Horizontal Seat Post Tube	1	27	Flywheel 14KG	1
6	Upright Post Tube	1	28	Bearing 6001ZZ	1
7	Screw Nut Plate	1	29	Bearing 6004	2
8	Handlebar	1	30	Washer $\phi 20.1 \times \phi 28.6 \times 6$	1
9	Flywheel plastic cover	2	31	Sensor magnet	1
10	Brake Seat	1	32	Shaft bushing $\phi 20.1 \times \phi 28.6 \times 31$	1
11	Cross head self-tapping screw ST4*12	6	33	Plastic Bushing M6	4
12	Brake Connection Plate	2	34	Torsion Spring	1
13	Adjustment Bracket	1	35	Magnet	4
14	Belt Pulley	1	36	Wolly Brake	1
15	Feet Pad $\phi 51 \times 17H \times M10 \times 32$	4	37	Sensor Wire	1
16	Pedal (L/R)	2	38	Sensor Wire	1
17	Water Bottle Holder	1	39	Sensor	1
18	Adjustment Knob	1	40	Monitor	1
19	Left Crank	1	40a	Monitor Wire	1
20	Right Crank	1	41	Button Head Cap Screw M5*25	2
21	Adjustment Knob for Horizontal Seat Post Tube	1	42	Front Housing	1
22	Brake Knob		43	Base Housing	1
44	Left Cover	1	73	Button Head Cap Screw M4*40	1
45	Right Cover	1	74	Button Head Cap Screw M4*10	2
46	Front Cover	1	75	Phillips Pan Head Self-Tapping Screw PA4*12	7
47	Left Flywheel Cover	1	76	Phillips Pan Head Self-Tapping Screw PA3*12	5
48	Right Flywheel Cover	1	77	Locking Nut M20	1
49	Seat Cushion	1	78	Flange Nut M12	2
50	Bushing M8	1	79	Flat Washer $\phi 6.2 \times 12 \times 1$	4
51	Brake Nut	1	80	Locking Nut M8	4
52	Bushing for Horizontal Seat Post Tube	1	81	Left-Handed Thread Locking Nut M8	2
53	Post Tube Plug	2	82	Hex Nut M8	1
54	Bushing M4	4	83	Locking Nut M4	1

55	Crank Cap	2	84	Locking Nut M6	1
56	Left Housing	1	85	Flat Washer $\phi 10.5 \times 20 \times 2.0$	10
57	Knob Cap	2	86	Flat Washer $\phi 8.5 \times 16 \times 1.5$	10
58	Knob Cover	1	87	Flat Washer $\phi 4.5 \times 12 \times 1$	4
59	Knob Base	2	88	Spring Washer $\phi 8.5 \times 13 \times 2.5$	3
60	Cap of Horizontal Seat Post Tube	2	89	Plastic Flat Washer $\phi 8.5 \times 16 \times 2$	1
61	Stabilizer Cap	4	90	Flat Washer $\phi 5.5 \times 12 \times 1$	2
62	Belt PJ1473	1	91	Monitor Fixed Seat	1
63	Brake Post	1	92	Locking Nut M10	1
64	Compression Spring	1	93	Bearing 6201ZZ	1
65	Transport Wheel	2	94	Flat Washer $\phi 12.5 \times 25 \times 2.0$	2
66	Button Head Cap Screw M10*60	4	95	Flange Nut M10	2
67	Button Head Cap Screw M6*45	1	96	Open End Wrench S13-15-17	1
68	Button Head Cap Screw M6*70	2	97	Allen Wrench S5	1
69	Button Head Cap Screw M8*50	1	98	Allen Wrench S6	1
70	Button Head Cap Screw M8*45	2	99	End Cap	1
71	Button Head Cap Screw M8*15	3	100	Screw M5*10	4
72	Button Head Cap Screw M5*12	17	101	Allen Wrench S3	1

DIAGRAM

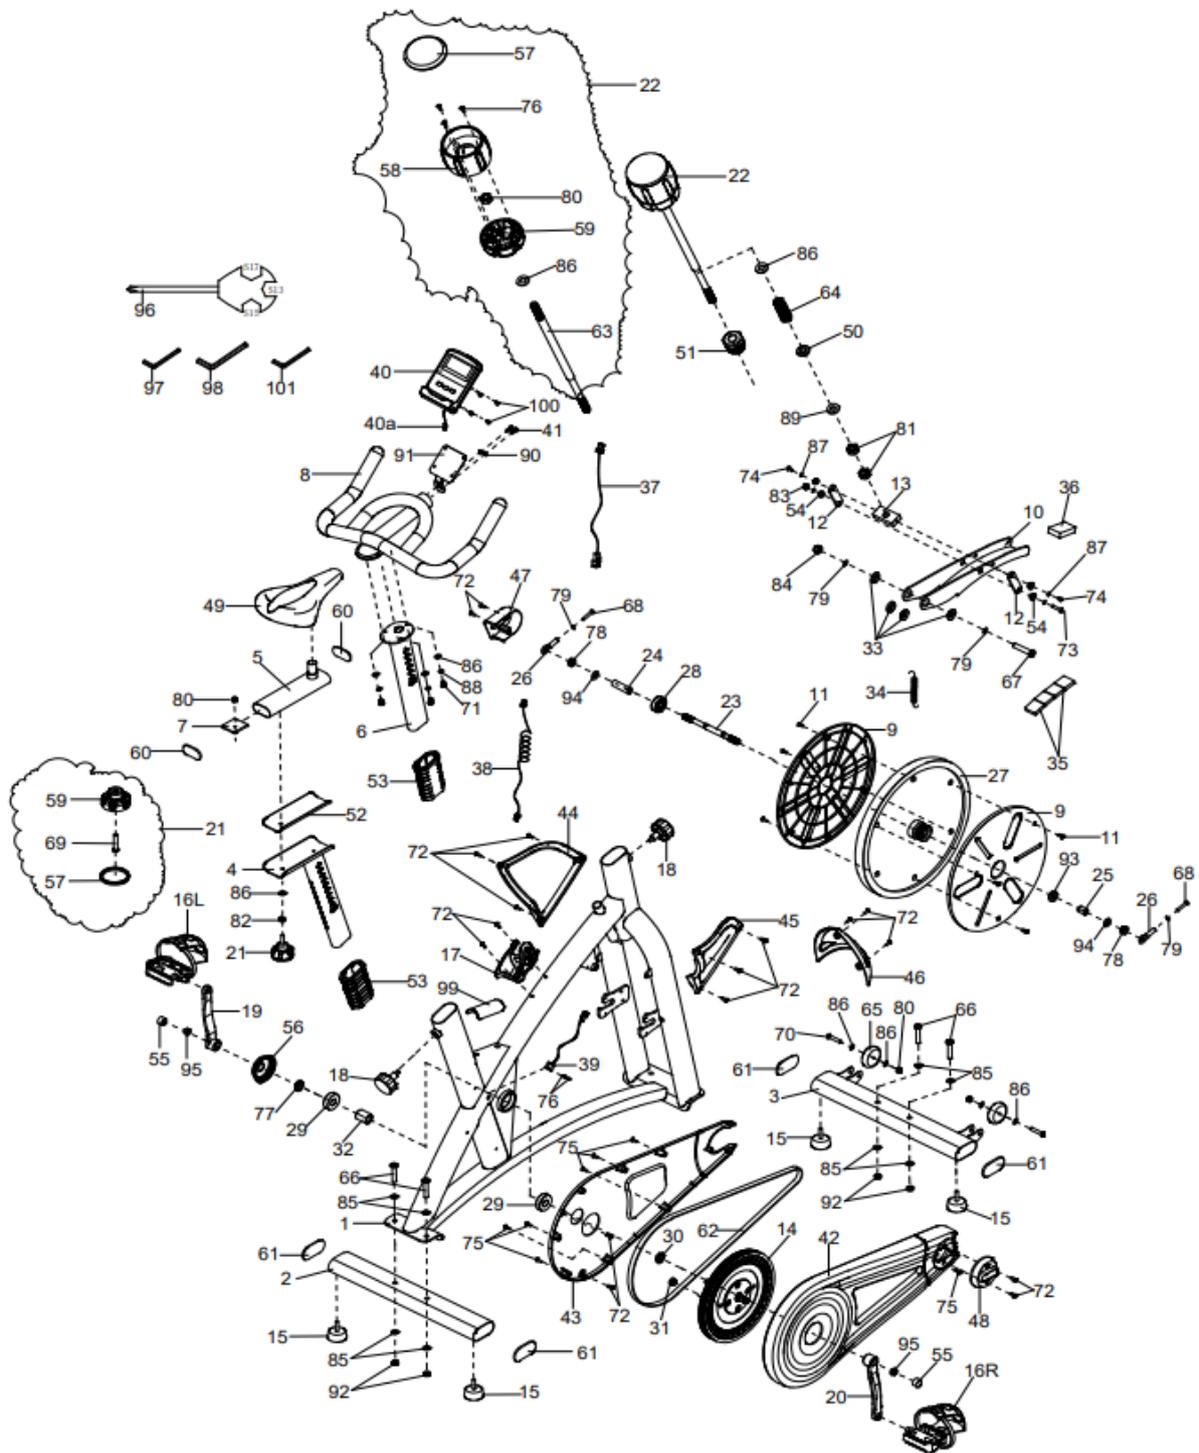

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264
Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
Stores inSPORTline SK, s.r.o.

Headquarters, warranty & service center: Električná 6471,
Trenčín 911 01, SK

CRN: 46259317
VAT ID: SK2023299729
Phone: +421(0) 917 700 098
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

