




USER MANUAL – EN
IN 26509 AirBike® inSPORTline Max

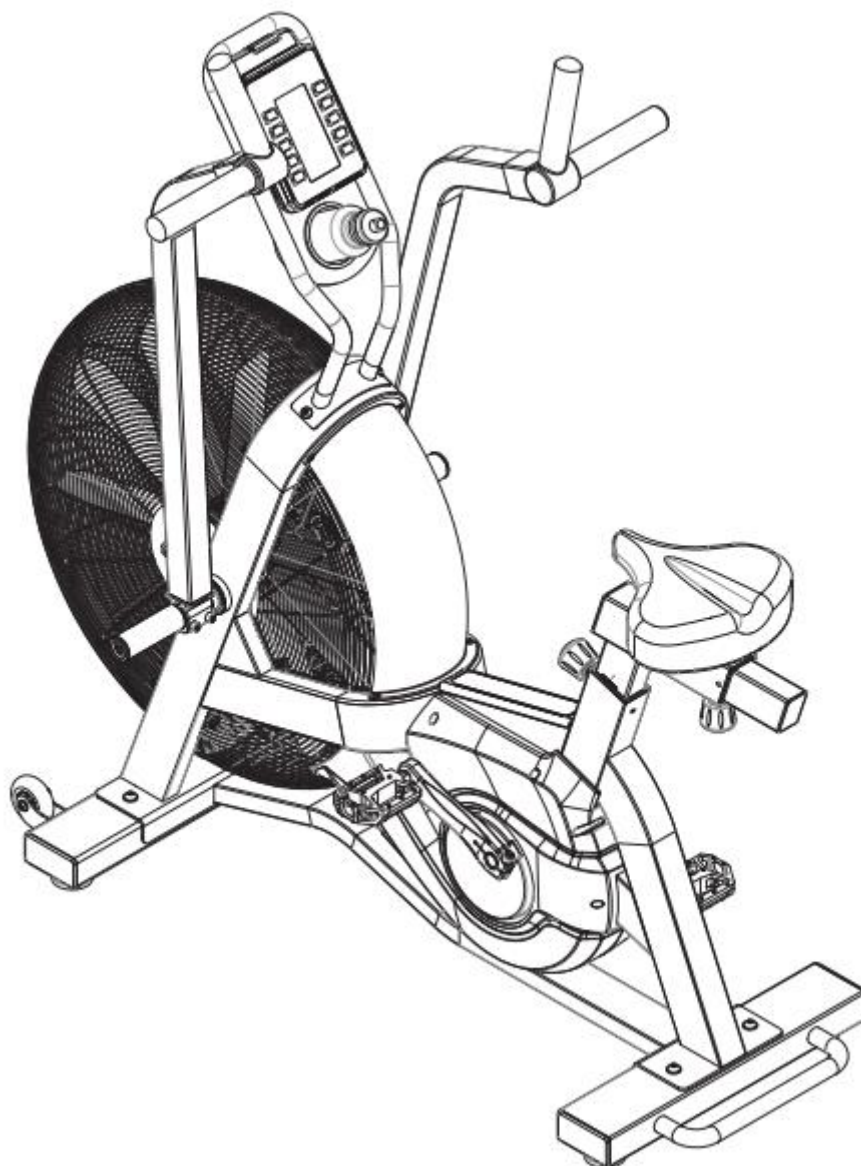

CONTENTS

- SAFETY INSTRUCTIONS..... 3
- ASSEMBLY 5
- CONSOLE 9
- SEAT ADJUSTMENT 15
- USE 16
- EXERCISING INSTRUCTIONS 17
- CORRECT BODY POSTURE 17
- MAINTENANCE 17
- STORAGE 18
- IMPORTANT NOTICE 18
- ENVIRONMENT PROTECTION 18
- DIAGRAM..... 19
- PARTS LIST 20
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 22


SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY INSTRUCTIONS

- Read all instruction in this manual before using this equipment and keep it for future references.
- Use the machine only for its intended use as described in this manual.
- Inspect and tighten all the loose parts before this equipment is used.
- Keeps hands away from moving parts.
- Keep children and pets away from the machine at all time. DO NOT leave children unattended in the same room with the machine.
- Before using the machine to exercise, always do stretching exercise to properly warm up.
- Inspect the machine before each use; make sure all of the connections are tightly secured.
- Only one person at a time should use the machine.
- If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
- Position the machine on a clear, levelled surface. DO NOT use the machine near water or outdoor.
- Always wear appropriate workout clothing when exercising. DO NOT wear robes or other clothing that could become caught in the machine. Sporting shoes are recommended when using the machine.
- Do not place any sharp object around the machine.
- Disabled persons should not use the machine without a qualified person or physician in attendance.
- Never operate the machine if the machine is not functioning properly.
- Only carry out training work on the equipment when it is in perfect working order. Only use original spare parts in the event of a repair.
- Do not use strong solvents for cleaning, and only use the tools supplied, or suitable ones of your own, for any repairs that may be required.
- Please dispose of the packaging and any parts that have to be replaced subsequently (all parts for the unit) at suitable collecting points or containers with a view to saving the environment.
- DO NOT pull out the seat tube over the warning line" max" which showing on the tube, when you adjust the height of the seat.
- Not for therapeutic use.
- For safety keep at least 0.6 m free space around the device.
- Do not put sharp items on the device. Adjustable parts should not interfere with user's movement.
- **Category:** SC for professional and commercial use
- **Weight limit:** 160 kg
- **WARNING!** The heart rate frequency monitoring may not be completely accurate. Overexertion during training can lead to a serious injury or even death. If you start to feel faint, stop the exercise immediately





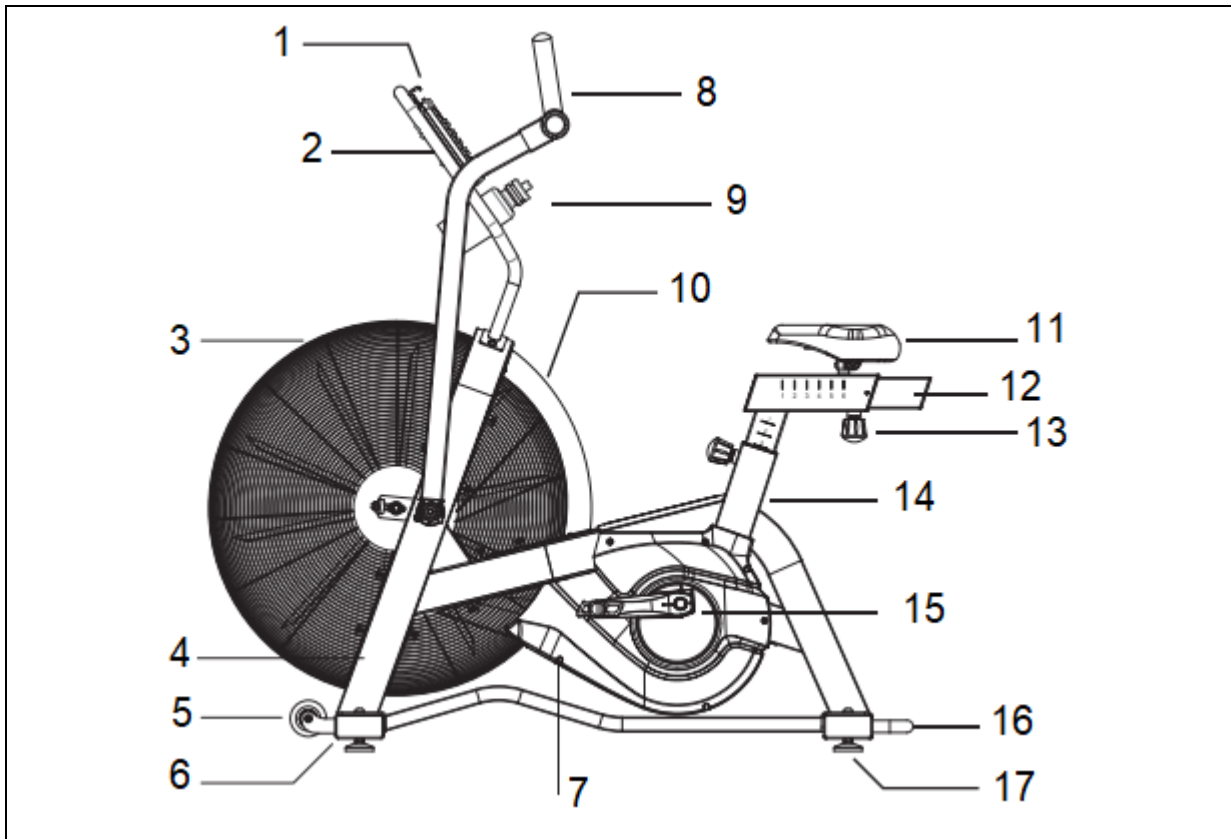




- **WARNING:** Before beginning any exercise program, consult your physician. This is especially important for persons with pre-existing health problems. The seller assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

PRODUCT DESCRIPTION

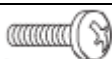

1. Console	10. Cover
2. Console holder	11. Saddle
3. Fan cover	12. Saddle holder
4. Main frame	13. Hand knob
5. Transport wheels	14. Seat post
6. Front stabilizer	15. Pedal
7. Cover	16. Rear stabilizer
8. Handles	17. Leveling feet
9. Bottle holder	

ASSEMBLY


	#76 Nut M8x1,25 cm, 4x
	#91 Spring washer M8, 4x
	#27 Flat washer M8, 6x
	#89 Bolt M8x15 mm, 2x
	#87 Bolt M5x12 mm, 4x
	#96 Bolt M10x1,5x15 mm, 4x
	#97 Flat washer M10, 4x
	#75 Bolt M8x50 mm, 4x
	#94 Bolt 1/2"x 133 mm, 2x

Pull out all the parts and lay them out on a flat and clean surface. Keep the packaging material until the end of assembly.

Step 1

Attach the rear stabilizer (69) to the main frame (1) with 2x M10x1.5x15mm bolts (96) and 2x M10 washers (97).

Attach the front stabilizer (62) to the main frame (1) with 2x M10x1.5x15mm bolts (96) and 2x M10 washers (97).

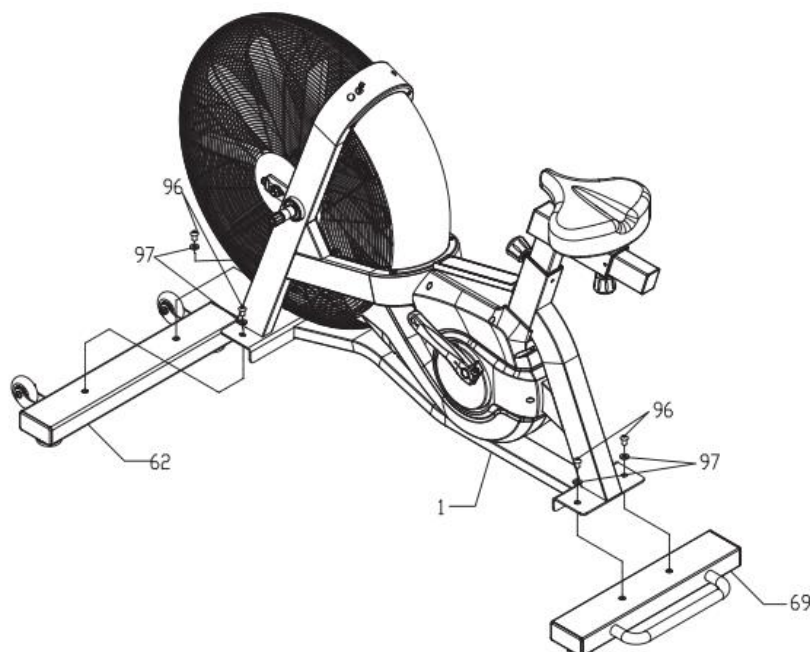


Step 2

Screw the left pedal (14) to the left crank (12) counterclockwise.

Screw the right pedal (15) to the right crank (13) clockwise.


Attach the Console Bracket (85) to the Main Frame (1) using 2x M8x15mm bolts (89) and 1x M8 Washers (27).

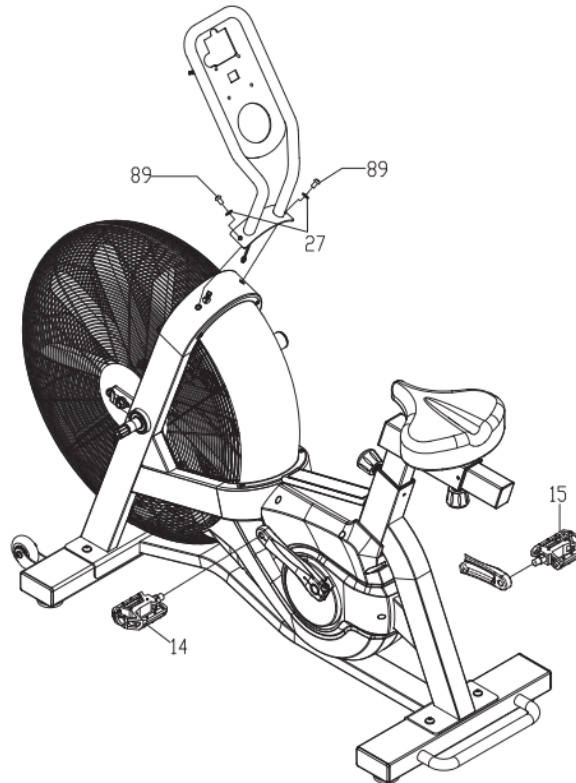

Step 3

Connect the sensor cable (88) to the console (84), then attach the console (84) to the console holder (85) with 4x M5x12mm bolts (87).

Attach the bottle holder (83) to the console holder (85). Then insert the bottle into the holder.

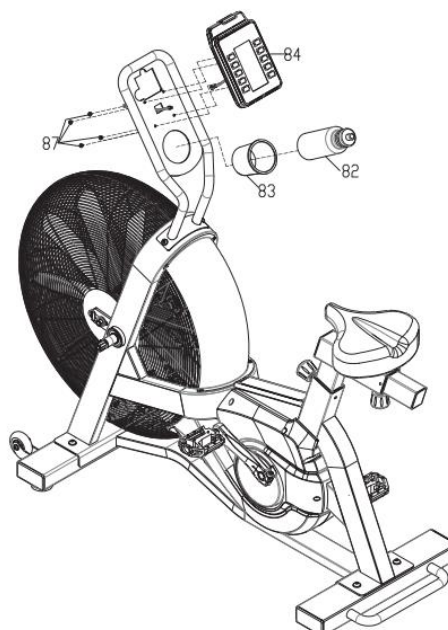


Step 4

Attach the left handle (90) to the left axle (29) using 2x M8x50 bolts (75), M8 flat washers (27), 2x M8 spring washers (91) and 2x M8 nuts (76).

Attach the right handle (95) to the right axle (29) using 2x M8x50 bolts (75), M8 flat washers (27), 2x M8 spring washers (91) and 2x M8 nuts (76).

Attach the footrests (92) to the axle (29) using ½" x133mm bolts (94).

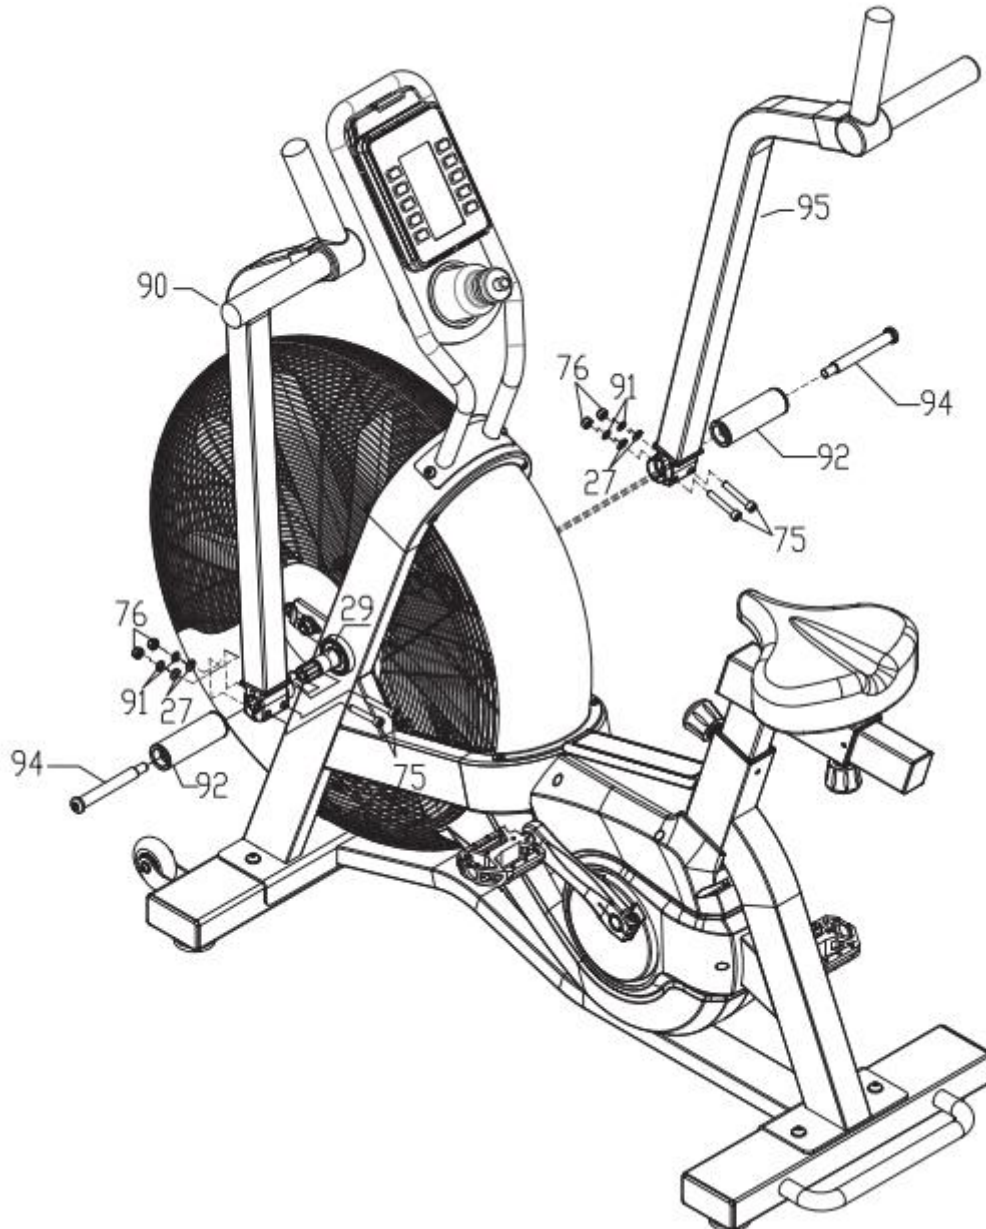


PLACEMENT

We recommend placing the AirBike on a protection mat. Make sure there is enough free space around the AirBike.

Leveling: Use the leveling feet (63) located under the rear stabilizer (69) for leveling. Level to make the AirBike stable.

Moving: Use the transport wheels (66) on the front stabilizer (62) for moving. Grab the handle on the back and move on the wheels.

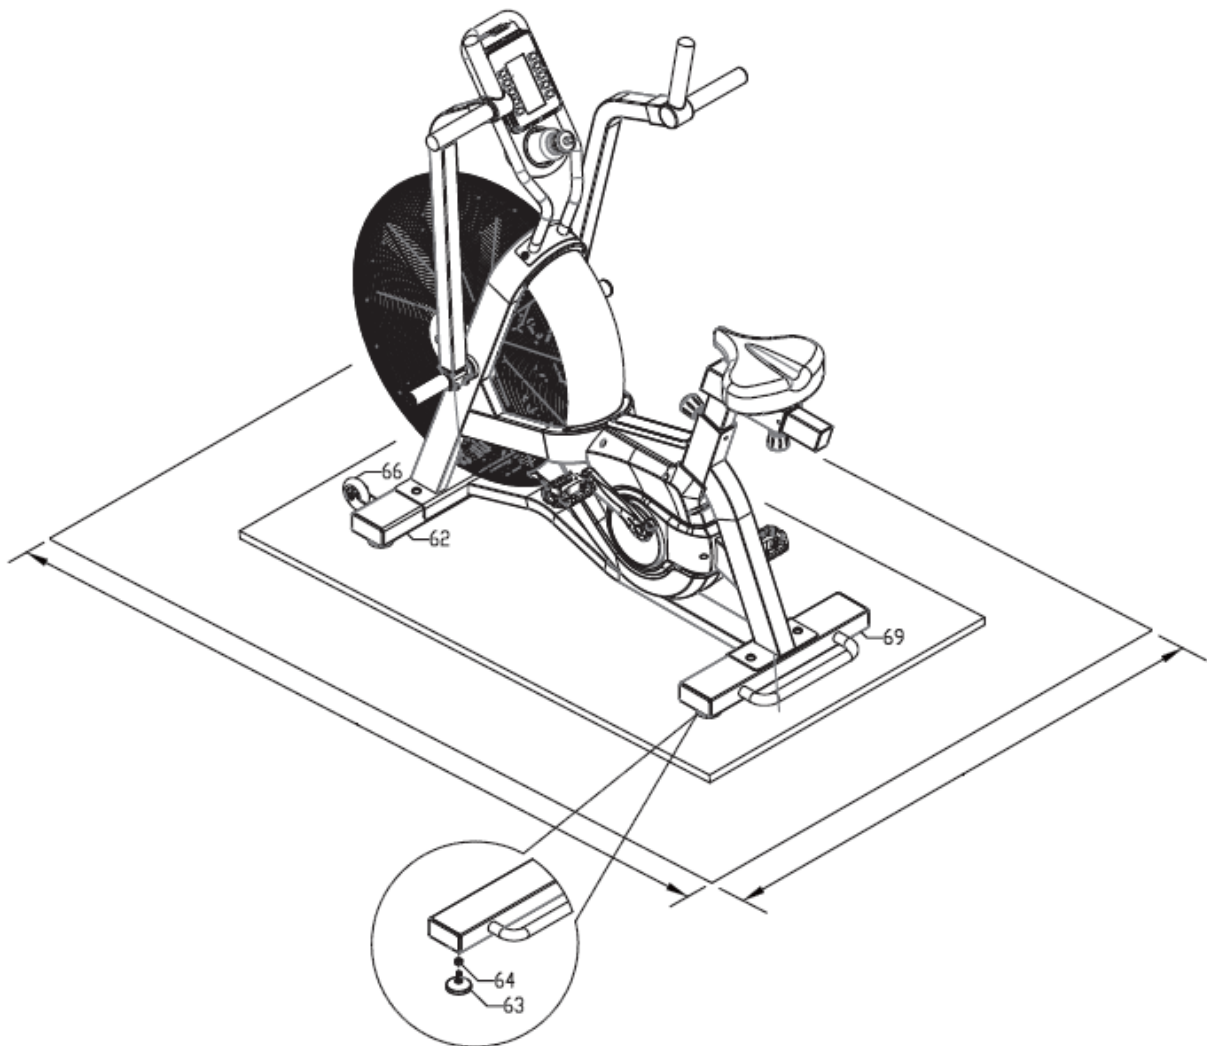

CONSOLE

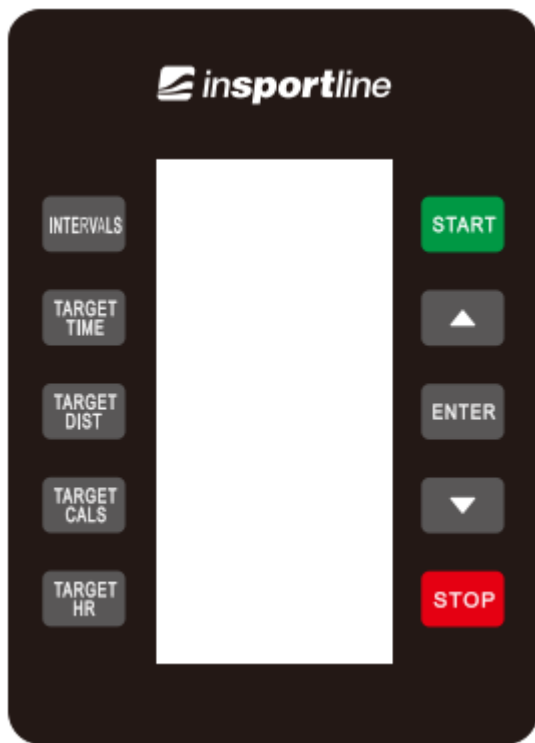


Fig. 1

After turning on the console, all segments will be displayed for 2 seconds (Fig. 1), 2 beeps will sound, and the console will switch to standby mode.

QUICK START

The program will start if the pedaling speed in standby mode is higher than 15 RPM. An audible signal will sound, and the console will switch to the quick start program.

You can also press the START button to start the program.

If a heart rate is detected, the console will display a heart symbol and the current value (Fig. 2). If no heart rate is detected, the value will not be displayed. "---" will be displayed instead of the numerical data.

Only the START, STOP and ENTER buttons are available during the program.

START – pause / start the program. If the program is paused, it will display TIME, DISTANCE and CALORIES data (Fig. 3).

If low RPM is detected for 5 min, an audible signal will sound, and the console will go into standby mode.

If no motion is detected for 5 min, the console will go into sleep mode.

If the program is paused, hold the ENTER button for 3 seconds to turn on/off the Bluetooth function.

Press START to start the program; press STOP to end the program.

If no movement is detected during exercise, but heart rate is detected, the console will end the program after 5 minutes.

After completing the exercise, the exercise time (TIME), distance (DISTANCE) and calories burned (CALORIES) will be displayed (Fig. 4).

After completing the exercise, if no motion is detected for 5 minutes, the console will go into sleep mode.

If higher than 15 RPM are detected for 6 seconds, the console will start the quick start program.

If less than 15 RPM are detected for 5 min, the console will announce the switch to standby mode with an audible signal.



Fig. 2



Fig. 3

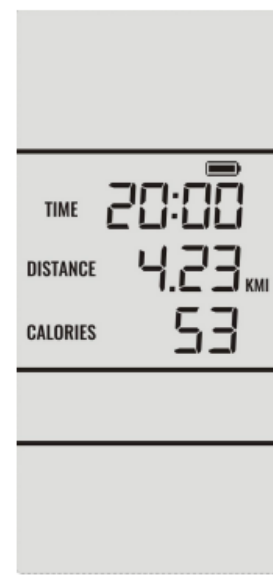


Fig. 4

PROGRAM INTERVAL 20/10

Press INTERVALS 1x in standby mode. Display will show 20/10. Press ENTER to confirm your selection. The total exercise time (TOTAL TIME) and the number of intervals 0/8 will be displayed (Fig. 5). Press START to start the program.

Press ENTER or START to start the program.

A countdown of 3 seconds starts and then the exercise part of the program (WORK) starts, which lasts 20 seconds. Then a 10-second rest starts.

The time will display a 4-minute countdown of the entire training session. Speed (SPEED), power (WATTS), revolutions per minute (RPM), distance (DISTANCE), calories (CALORIES) will be added. The current interval is displayed at the top of 1/8 (Fig. 6).



Fig. 5

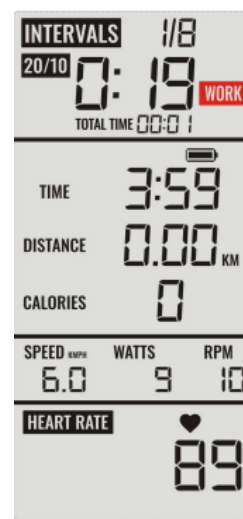


Fig. 6

PROGRAM INTERVAL 10/20

In standby mode, press 2x INTERVALS. Display will show 10/20. Press ENTER to confirm your selection. The total exercise time (TOTAL TIME) and the 0/8 interval will be displayed (Fig. 7). Press START to start the program.

Press ENTER or START to start the program.

A countdown of 3 seconds starts and then the exercise part of the program (WORK) starts, which lasts 10 seconds. After that, a 20 second rest starts.

The time will display a 4-minute countdown of the entire training session. Speed (SPEED), power (WATTS), revolutions per minute (RPM), distance (DISTANCE), calories (CALORIES) will be added. The current interval is displayed at the top of 1/8 (Fig. 8).



Fig. 7



Fig. 8

USER INTERVAL PROGRAM

In standby mode, press 3x INTERVALS. CUSTOM will appear (Fig. 9). Press ENTER to confirm your selection. The total time 06:40 and the number of intervals 0/8 will be displayed. The interval setting range is from 1 to 99. Press START to start the program.

You can use the up / down buttons to adjust the number of intervals, the total training time will be adjusted in proportion to the number of intervals. After you set the number of intervals, press ENTER to enter the training interval length setting.

Using the up / down buttons you can set the time of the exercise interval; the default value is 0:30 (Fig. 10). The setting range is 0:01 - 9:59.

Press ENTER to confirm the setting and go to the rest interval setting. The default value of the rest interval is 0:20 (Fig. 11). The setting range is 0:01 - 9:59.

Press START to start the program; press STOP to pause the program.



Fig. 9

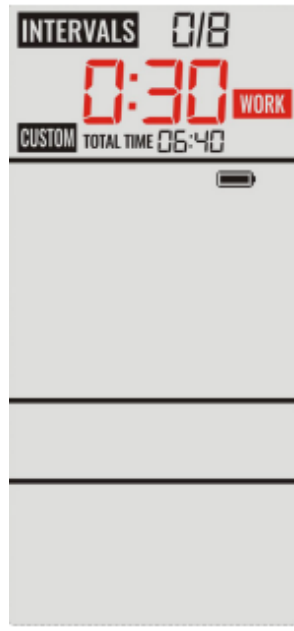


Fig. 10



Fig. 11

TIME COUNTDOWN PROGRAM

In standby mode, press TARGET TIME. The time starts flashing, the default value is 10:00 (Fig. 12). Use the up / down buttons to adjust the value in the range 1:00 - 99:00. Press START to start the program.



Fig. 12

DISTANCE COUNTDOWN PROGRAM

In standby mode, press the TARGET DIST button. The distance will flash, the default value is 3.00 (Fig. 13). Use the up / down buttons to adjust the value in the range 0.50-99.00. Press START to start the program.

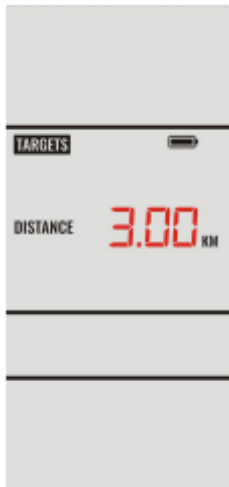


Fig. 13

CALORIE COUNTDOWN PROGRAM

In standby mode, press TARGET CALS. The calories will flash, the default value is 20 cal (Fig. 14). Use the up / down buttons to adjust the value in the range 1-999. Press START to start the program.



Fig. 14

TARGET HEART RATE 80%

In standby mode, press TARGET HR 1x. Press ENTER to confirm the selection and enter the settings.

The display showing 80% will show the target heart rate proportional to the set age (default set age 24, Fig. 15). You can adjust the age using the up / down buttons. The setting range is 10 – 120 years. Press START to start the program.

If the heart rate is lower than the set value, the display will show SPEED UP (Fig. 16).

If the heart rate is higher than the set value, the display will show SLOW DOWN (Fig. 17).

If the heart rate is within the set range, it will display the current exercise data (Fig. 18).

The heart rate is calculated to be 220-age.

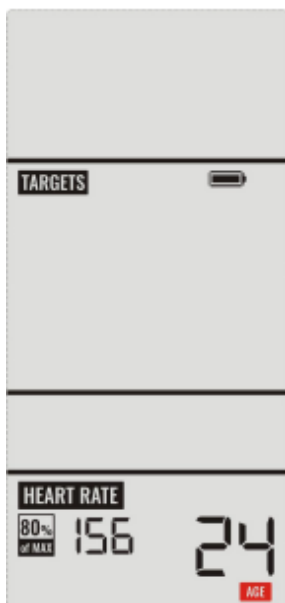


Fig. 15



Fig. 16



Fig. 17



Fig. 18

TARGET HEART RATE 65%

In standby mode, press 2x TARGET HR. Press ENTER to confirm the selection and enter the settings.

The display showing 65% will show the target heart rate proportional to the set age (default set age 24, Fig. 19). You can adjust the age using the up / down buttons. The setting range is 10 – 120 years. Press START to start the program.

If the heart rate is lower than the set value, the display will show SPEED UP (Fig. 20).

If the heart rate is higher than the set value, the display will show SLOW DOWN (Fig. 21).

If the heart rate is within the set range, it will display the current exercise data (Fig. 22).

The heart rate is calculated to be 220-age.



Fig. 19



Fig. 20



Fig. 21

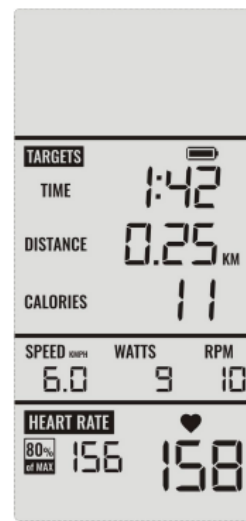


Fig. 22

UNIT SETTINGS

In standby mode, press the up / down buttons simultaneously for 3 seconds.

You can set KM and KM/H (Fig. 23).

You can set MI and MP/H (Fig. 24).

After removing the batteries, the console will reset to factory settings.

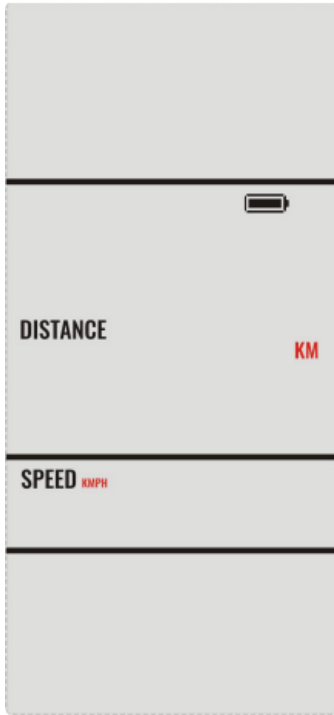


Fig. 23

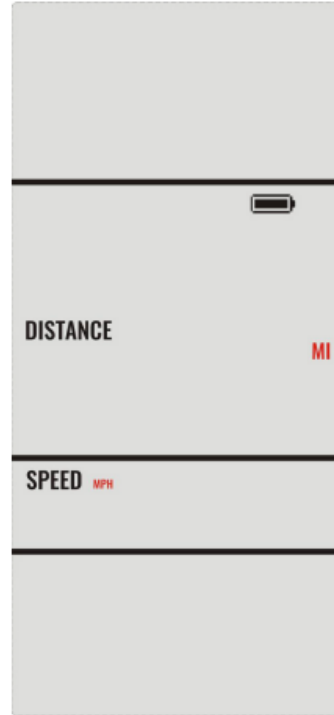


Fig. 24

BLUETOOTH


In standby mode, during exercise or when the program is paused, hold the ENTER button for 3 seconds.

You can use Bluetooth to connect the console to applications or the chest strap.

SEAT ADJUSTMENT


Height

Adjust the height by loosening the hand knob (55) and pulling the seat post (67) to the desired height. Never exceed the permitted height. Then tighten the hand knob.

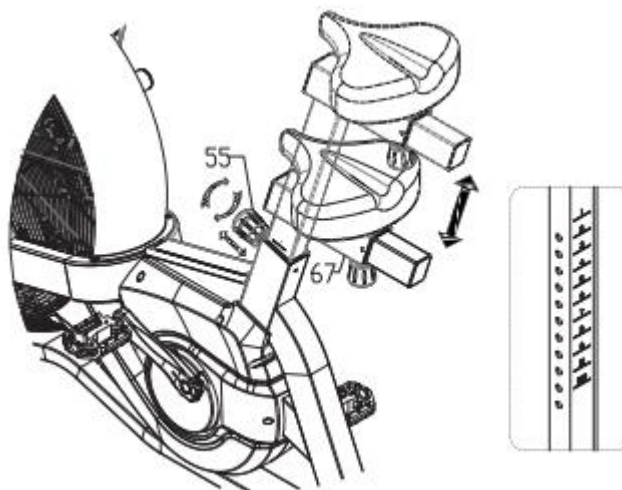

Horizontal position of the saddle

Loosen the hand knob (55) and adjust the saddle holder (71) to the desired position. Then tighten the hand knob again.

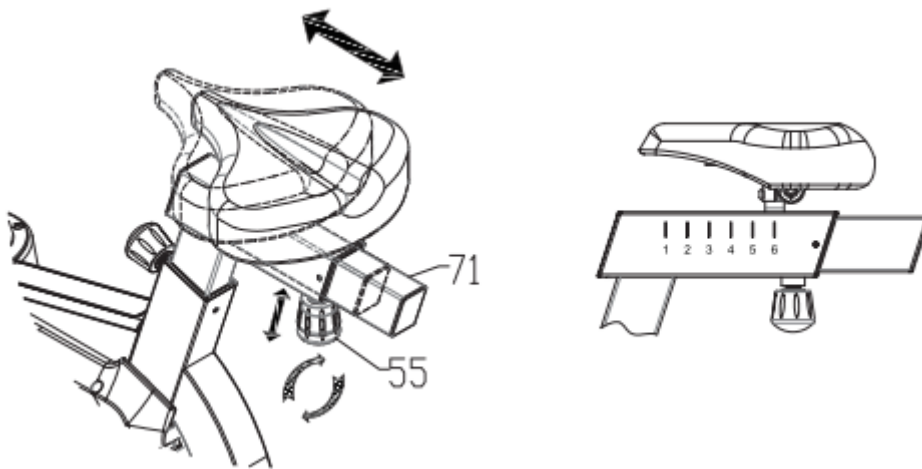

USE

Exercise on the exercise bike is based on very simple movements, but you will surely fall in love with them. Thanks to simplicity of the exercise on the exercise bike in can be done by elderly people. Prior to exercise, it is necessary to adjust the height of the saddle. It is important that you sit comfortably. The bicycle saddle must be set so that you can hold the ergonomically shaped handles when sitting. You should not have fully extended hands. You can damage your muscles.

To ensure a comfortable and comfortable exercise, put your feet on the pedal. Nowadays, all modern pedals are equipped with straps for fastening and stabilizing of the foot. It is important for your foot to be firmly and safely positioned during exercise.

The basis of exercising on a bicycle is that the legs are moving on a specific elliptical path. This movement is very similar to cycling. When doing exercise on a bicycle, you just sit on the saddle with the right height, keep your feet firmly in the pedals, hold the ergonomically shaped handles and exercise.

It is advisable at the beginning to choose a lower load. If you exercise at regular intervals on an exercise bike, you can gradually increase the load. You can increase the load gradually over a week or two weeks. Selecting a high load during the start of training can lead to rapid fatigue and muscle damage.

When exercising, it's important to choose the right load and the right tempo. Try to keep it throughout the exercise. It is not recommended to choose a high pace right from the start. Increase tempo after about a week of regular exercise. The high pace is not equal to the faster burning of calories. Correct calorie burning is reflected in an appropriate and regular exercise. At the beginning of the exercise, the number of burned calories may seem low, but regular and appropriate exercise is the key to achieving the best results.

Exercise on the exercise bike also leads to the formation of muscles. It is mainly used to strengthen the thigh and calf muscles. While exercising on a bicycle, you also move your buttocks.

If you want to exercise right, you should not forget to breathe properly. Proper and regular breathing is recommended in any exercise. It is important to keep regular deep inhales and exhales. Regular and proper breathing during exercises on the exercise bike involves intense exercise of the abdominal muscles. It is advisable to practice 30-35 after consuming food. Failure to do so may result in less calories burned, and in older age even lead to digestive problems.

For best results, you should also consider your diet. It is recommended to start a day of eating sweet food and pastries or muesli with milk. For lunch is recommended to eat a caloric richer meal. Do not forget about the soup. In the evening, light meals are recommended. If you want to improve your health, it's not just a regular exercise but a whole diet.

Bicycle exercise is an effective exercise for all busy people. Exercise on the exercise bike is effective in strengthening muscles, especially thighs, calves and buttocks. Regular exercise can lead to a slimmer figure. Exercise is recommended not only as a winter training for cyclists but also for people who want to burn excess calories. Regular breathing, regular exercise, reasonable tempo, and balanced diet can lead to your desired results.

EXERCISING INSTRUCTIONS

A successful workout begins with warm-up exercises and ends with cool-down (relaxing) exercises. The warm-up exercises should make your body ready for the main workout. The cool-down phase should protect your muscles from injuries and cramps. Do warm-up and cool-down exercises as shown in the chart below.



Touching your toes

Slowly bend your back from hips. Keep your back and arms relaxed while stretching downwards to your toes. Do it as far as you are able and hold the position for 15 seconds. Bend your knees slightly.



Upper thigh

Lean against a wall with one hand. Reach down and behind you. Lift up your right or left foot to your buttock as high as possible. Keep for 30 seconds and repeat twice for each leg.



Hamstring stretched

Sit and outstretch your right leg. Rest the sole of your left foot against the inside of your right thigh. Stretch out your right arm along your right leg as far as you can. Hold for 15 seconds and relax. Repeat all with your left leg and left arm.



Inside upper thigh

Sit on the floor and place your feet together. Knees are pointed outwards. Pull your feet as close as possible to your groin. Press your knees carefully downwards. Keep this position for 30-40 seconds if possible.



Calves and Achilles tendon

Lean against a wall with your left leg in front of the right one and your arms forward. Stretch out your right leg and keep your left foot on the floor. Bend your left leg and lean forwards by moving your right hip in the direction of the wall. Hold for 30-40 seconds. Keep your leg stretched and repeat exercising with other leg.

CORRECT BODY POSTURE

When training, keep your body upright, or you can learn your hand on your forearms. During pedaling, you should not have your legs fully extended. Your knees should be slightly bent when fully pressing down the pedal. Keep your head straight with your spine to minimize the pain of the cervical muscles and upper back muscles. Always exercise fluently and rhythmically.

MAINTENANCE

- When assembling, tighten all screws and adjust the bike to the horizontal position.
- Check the screws after 10 hours of use.
- Wipe the sweat after the exercise. Clean the device with a cloth and gentle cleanser. Do not use solvents or aggressive cleaners on the plastic parts.

- When noise is increased, it is necessary to check that all joints are tightened properly.
- Place the product in a clean, ventilated and dry room.
- Do not expose the device to direct sunlight.

STORAGE

Keep the exercise bike in a clean and dry environment. Make sure the power switch is turned off and the exercise bike is not plugged into the power socket.

IMPORTANT NOTICE

- This exercise bike comes with standard safety regulations and is only suitable for professional and commercial use. Any other use is prohibited and may be dangerous to users. We are not responsible for any injury caused by improper and forbidden use of the machine.
- Consult your doctor before starting training on the exercise bike. Your doctor should evaluate whether you are physically fit to use the machine and how much effort you are able to undergo. Incorrect exercise or switching of the body can harm your health.
- Carefully read the following tips and exercises. If you experience pain, nausea, breathing, or other health problems during exercise, immediately stop the exercise. If the pain persists, contact your doctor immediately.
- This exercise bike is not suitable for medical purpose. It can also not be used for healing purposes.
- The heart rate monitor is not a medical device. It provides only approximate information about your average heart rate, and any suggested pulse rate is not medically binding. Accumulated data may not always be accurate regarding uncontrollable human and environmental factors.


ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyards.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

DIAGRAM

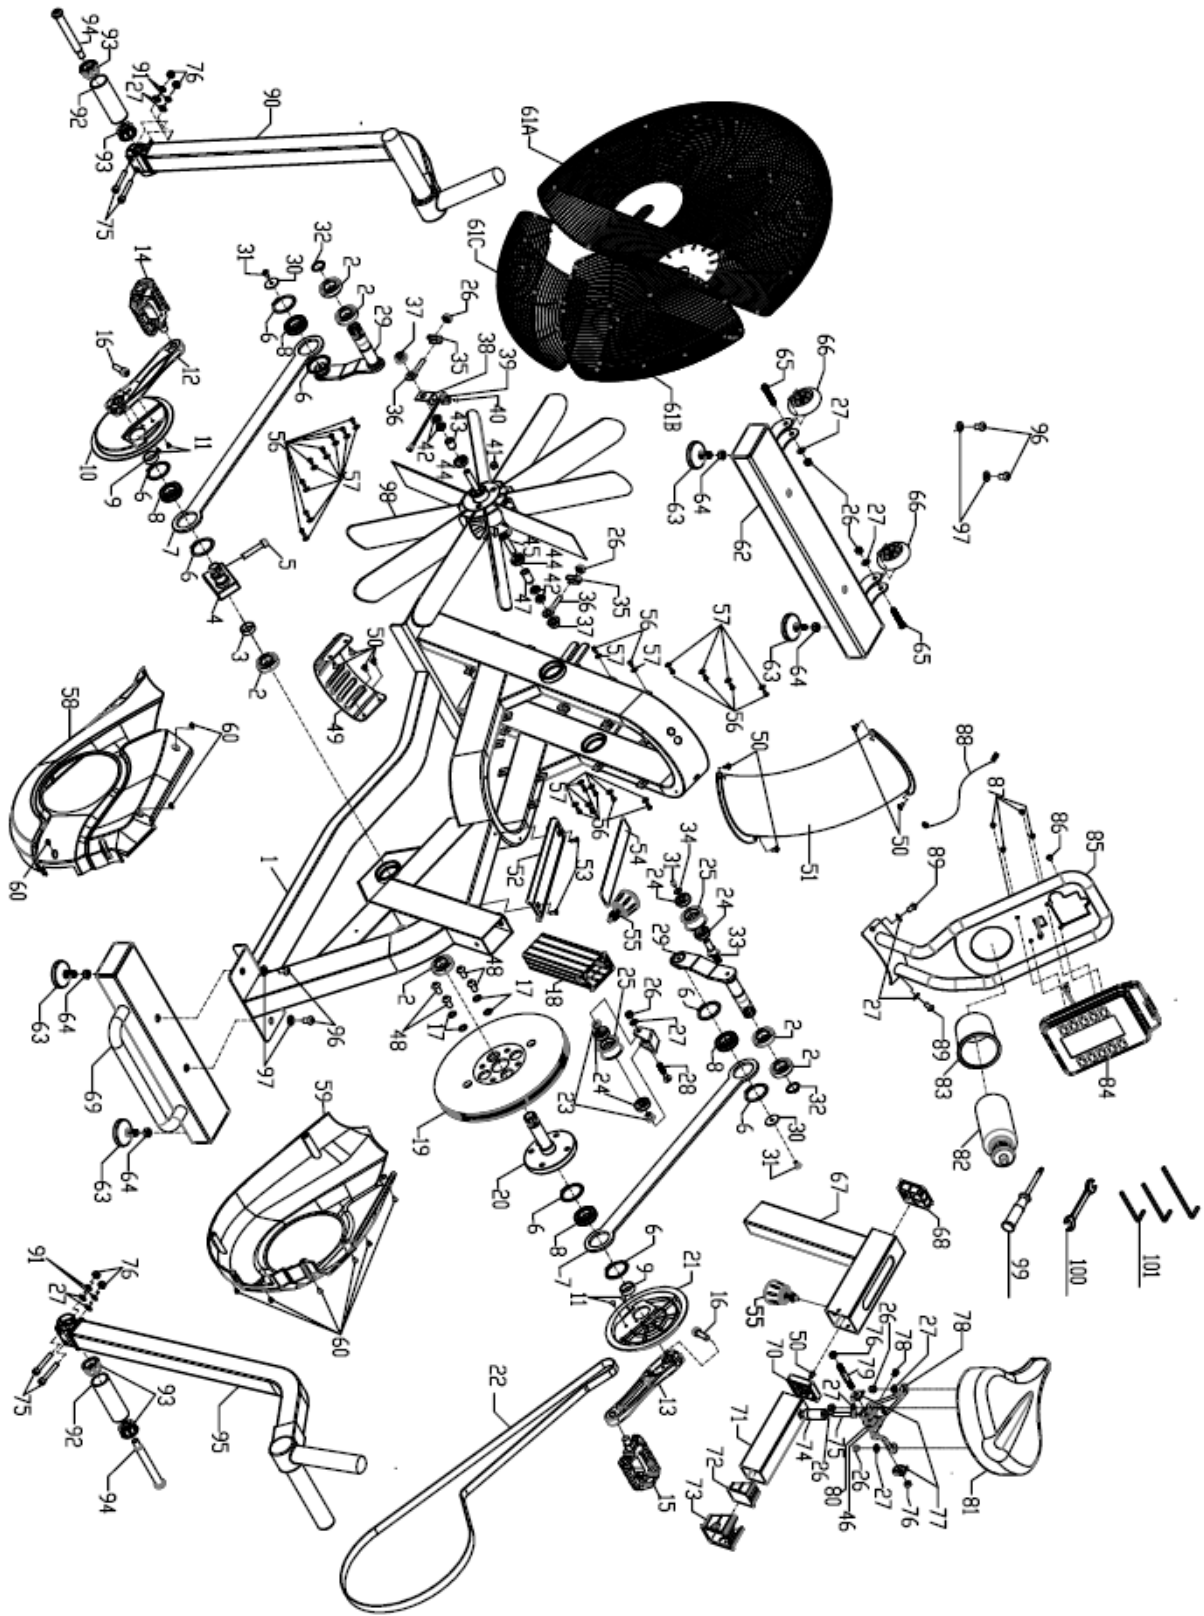

PARTS LIST

No.	Name	Qty.
1	Main frame	1
2	Bearing 6005z	6
3	Spacer Ø30*Ø25.2*9.8 mm	1
4	Square crank	1
5	Bolt M10x1.5x50mm	1
6	Circlip Ø47 mm	8
7	Left / right connecting frame	2
8	Bearing 6005z	4
9	Spacer Ø30* Ø25.2* 10.5 mm	2
10	Left crank cover	1
11	Phillips bolt M4x10 mm	4
12	Left hand crank	1
13	Right click	1
14	Left pedal	1
15	Right pedal	1
16	Allen bolt M10 x 1.25 x 35 mm	2
17	Spring washer M10	4
18	Seat post insert	1
19	Belt pulley	1
20	Crankshaft	1
21	Right crank cover	1
22	Belt	1
23	Idle gear Ø18* Ø8.1* 12 mm	2
24	Bearing 6201z	4
25	Tension pulley Ø48*25 mm	2
26	Nut M8	8
27	Flat washer Ø 9* Ø 16mm	12
28	Support screw M8*45 mm	1
29	Left / right short connecting plate	2
30	Flat washer Ø6.2* Ø30 mm	2
31	Bolt M6x12 mm	3
32	Circlip Ø25 mm	2
33	Idler pulley holder	1
34	Flat washer Ø6.2* Ø16 mm	1
35	Buckle	2

36	Bolt with eyelet M8x40 mm	2
37	Nut M12x1.25 mm	2
38	Sensor clip holder	1
39	Sensor clip	1
40	Cross self-tapping screw ST3.5x10 mm	1
41	Magnet	1
42	Nut M12x1.25 mm	4
43	Spacer Ø15 * Ø13 * 15.5 mm	1
44	Bearing 6001Z	2
45	Fan axis	1
46	Saddle frame	2
47	Spacer Ø15* Ø13* 27 mm	1
48	Bolt M10x20 mm	4
49	Lower protective cover	1
50	Phillips bolt M5x10 mm	9
51	Cover	1
52	Pedal frame	1
53	Phillips bolt M5x10 mm	2
54	Pedals	1
55	Hand knob	2
56	Cross self-tapping bolt ST4.2*15 mm	20
57	Flat washer Ø5.3* Ø15 mm	20
58	Left protective cover	1
59	Right protective cover	1
60	Cross self-tapping bolt ST4.0*12	9
61A	Front fan cover	1
61B	Top fan cover	1
61C	Bottom fan cover	1
62	Front stabilizer	1
63	Adjustable feet	4
64	Nut M10x1.5 mm	4
65	Bolt M8x45 mm	2
66	Transport wheels	2
67	Seat post	1
68	Square cap	1
69	Rear stabilizer	1
70	Square cap	1
71	Seat post extension	1

72	Square cap 38.1 x 63.5 mm	1
73	Seat slider cover	1
74	Saddle holder	1
75	Allen bolt M8x50 mm	5
76	Nut M8	6
77	Reinforcing plates	2
78	Bolt M8x7 mm	1
79	M8 saddle fixing bolt	1
80	Seat holder	1
81	Seat	1
82	Bottle	1
83	Bottle holder	1
84	Console	1
85	Console bracket frame	1
86	Cable cover Ø12	2
87	Phillips bolt M5x12 mm	4
88	Sensor cable	1
89	Cap bolt M5x15 mm	2
90	Left handle	1
91	Flexible washer M8	4
92	Footrest Ø38	2
93	Circular cap Ø38	4
94	Bolt ½"x133 mm	2
95	Right handle	1
96	Bolt with cylindrical head M10x1.5x15 mm	4
97	M10 flat washer	4
98	Fan blades	1
99	Screwdriver	1
100	Wrench 13 – 15 – 17	1
101	Allen key 5 mm/ 6 mm/ 8 mm	1+1+1

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00,
ČR

Headquarters: Dělnická 957, Vítkov, 749 01

Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264

VAT ID: CZ26847264

Phone: +420 556 300 970

E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471,
Trenčín 911 01, SK

CRN: 36311723

VAT ID: SK2020177082

Phone: +421(0)326 526 701

E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

